

Spare part kits

The spare part kits contain carefully composed sets with exactly the parts that you need for your maintenance or repair.

TAURUS® 1-4

Spare part kit: 145 7720 - Grip seal set for TAURUS® 1-4

Spare part no.	Article no.	Designation
37	143 5472	Flat gasket 1
43	143 5480	Flat gasket 2
60	143 5486	O-ring

Spare part kit: 145 7721 - Lock activator seal set for TAURUS® 1-4

Spare part no.	Article no.	Designation
19	143 5632	Piston seal
20	143 5488	Supporting ring
21	143 5485	Piston seal

Spare part kit: 145 7723 - Control piston seal set for TAURUS® 2-4

Spare part no.	Article no.	Designation
52	143 5648	Spacer cage (4x)
53	143 5647	Rod seal (3x)
54	143 5651	Control piston
55	143 5675	Piston seal
56	143 5652	Piston housing
57	143 5688	O-ring (2x)

TAURUS® 2-4

Spare part kit: 145 7853 - Mandrel retainer set for TAURUS® 2-4

Spare part no.	Article no.	Designation
31	144 6028	Retaining spring
32	143 5664	Retainer
33	143 5663	Adapter
34	143 5842	Lock washer
35	143 5766	Connecting piece nut 2/3

TAURUS® 1

Spare part kit: 145 7719 - Air piston seal set for TAURUS® 1

Spare part no.	Article no.	Designation
62	143 5658	Piston seal
63	143 5657	Guide ring 1
64	143 5656	Piston seal
66	143 5660	O-ring
67	143 5659	Rod seal
68	144 6027	Snap ring
69	143 5680	O-ring

Spare part kit: 145 7722 - Control piston seal set for TAURUS® 1

Spare part no.	Article no.	Designation
52	143 5648	Spacer cage (3x)
53	143 5647	Rod seal (3x)
54	143 5651	Control piston
55	143 5675	Piston seal
56	143 5652	Piston housing
57	143 5688	O-ring (2x)

Spare part kit: 145 7724 - Mandrel retainer set for TAURUS® 1

Spare part no.	Article no.	Designation
31	144 6028	Retaining spring
32	143 5664	Retainer
33	143 5663	Adapter
34	143 5842	Lock washer
35	143 5849	Connecting piece nut 1

Spare part kits

TAURUS® 2

Spare part kit: 145 7852 - Air piston seal set for TAURUS® 2

Spare part no.	Article no.	Designation
25	143 5635	Rod seal
62	143 5841	Piston seal
63	143 5825	Guide ring 2
64	143 5670	Piston seal
66	143 5834	O-ring
68	144 6082	V-profile ring
69	143 5839	O-ring

TAURUS® 3

Spare part kit: 145 7924 - Air piston seal set for TAURUS® 3

Spare part no.	Article no.	Designation
25	143 5635	Rod seal
62	143 5841	Piston seal
63	143 5825	Guide ring 2
64	143 5670	Piston seal
66	143 5937	O-ring
68	144 6082	V-profile ring
69	143 5927	O-ring

TAURUS® 4

Spare part kit: 145 8000 - Seal set Air piston TAURUS® 4

Spare part no.	Article no.	Designation
25	143 5635	Rod seal
55	143 5675	Piston seal
62	143 6007	Piston seal
63	143 6006	Guide ring 4
66	143 5937	O-ring
68	144 6082	V-profile ring
69	143 5927	O-ring

PH 1/PH 2

Spare part kit: 145 6778 - K seal set PH1/PH2

Spare part no.	Article no.	Designation
10 •	143 4323	K seal
13 •	143 4324	K seal
15 •	143 4326	K seal

PH 2000

Spare part kit: 145 6731 - Tool head seal set for PH 2000

Spare part no.	Article no.	Designation
10	145 6749	Annular piston complete
11	145 6750	Scraper ring complete
12	145 6751	Cylinder sleeve complete
28	143 4221	Flat gasket
41	143 4223	Rod seal
17	143 4226	O-ring
14	143 4227	O-ring
39	143 4228	O-ring